



MediaLink Controller (MLC) - on top of Desk

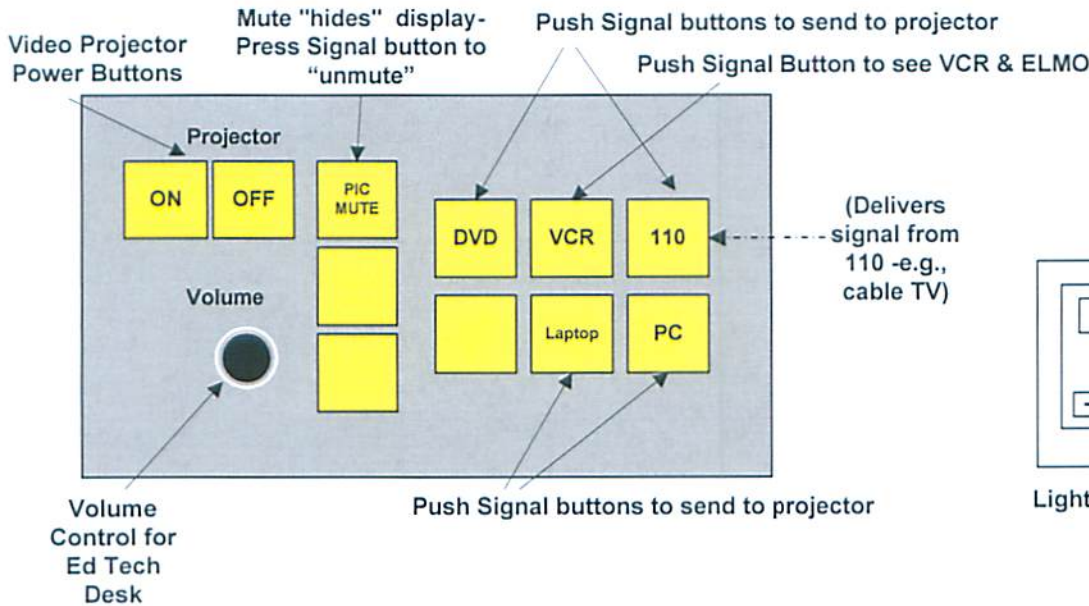

Black "pop-up" well (beside MLC Controller)

INCLUDES:
- (2) electrical outlets

Screen and Light Switches

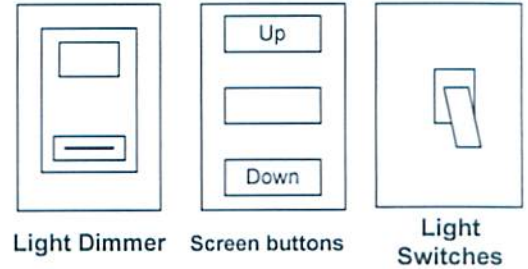

Problems? Telephone hanging on wall by Desk to call Video @5-9136, IT Helpline @5-9124

OTHER FEATURES:

- Cables for LAPTOP hookup/network laying inside monitor well
- (2) USB ports on monitor's side - for USB key and full-size keyboard (if needed)

1. To turn on video projector (VP) press "ON" button on the **MediaLink Controller (MLC)**; there will be several seconds delay before VP powers on. Buttons flash fast several seconds. VP takes 90 seconds to full brightness

NOTE: You cannot switch Signal buttons until "ON" button stops flashing

2. While VP is warming up, turn on equipment to be used

NOTE: SEE instructions attached:

- "Log-In" - To access classroom Network or your personal drive
- "Wireless Mouse" - Includes how to use mouse with Power Point
- "Wireless Keyboard" (undersized)

NOTE: Full-sized keyboard might stored on bottom shelf; plugs into USB port/side of monitor

3. Lower screen (automatically stops) and adjust lights as needed, using switches on wall near Desk

4. Display various signals [e.g., computer, DVD player, VHS (also ELMO), laptop] on screen by pressing Signal buttons on **MLC Controller**

NOTE: To "hide" computer image, press "PIC MUTE" button. (Button will flash red; screen displays "No Signal")
To redisplay image, press "PIC MUTE" button again. (Button will turn solid yellow; screen displays image.)
To display ELMO, turn on VCR inside Desk. On **MLC Controller**, press "VCR" button.

5. Adjust volume by using black "Volume" knob, located under "ON" and "OFF" buttons on **MLC Controller**

NOTE: For "110" signal (i.e., cable TV), adjust control volume using "PA System Volume" dial on wall

6. When finished, LOG OFF computer, return wireless mouse to cradle, put up screen. TURN OFF equipment, especially VP, to preserve lamp. (However, IF NEXT INSTRUCTOR uses, leave VP on.) To turn off VP, press "OFF" button on **MLC Controller**. Button will flash slowly 2-3 minutes while turning off VP. VP fan will run until lamp is cooled

WARNING !

The **MLC Controller** is programmed to shut off projector if a selection button isn't pushed after 4 hours.

Pushing one of buttons will start the **Controller's** "timer counting" again so no disruption of signal. Or you can push the Display Power Button again to restart the projector.

NOTE: You cannot restart VP until buttons stop flashing